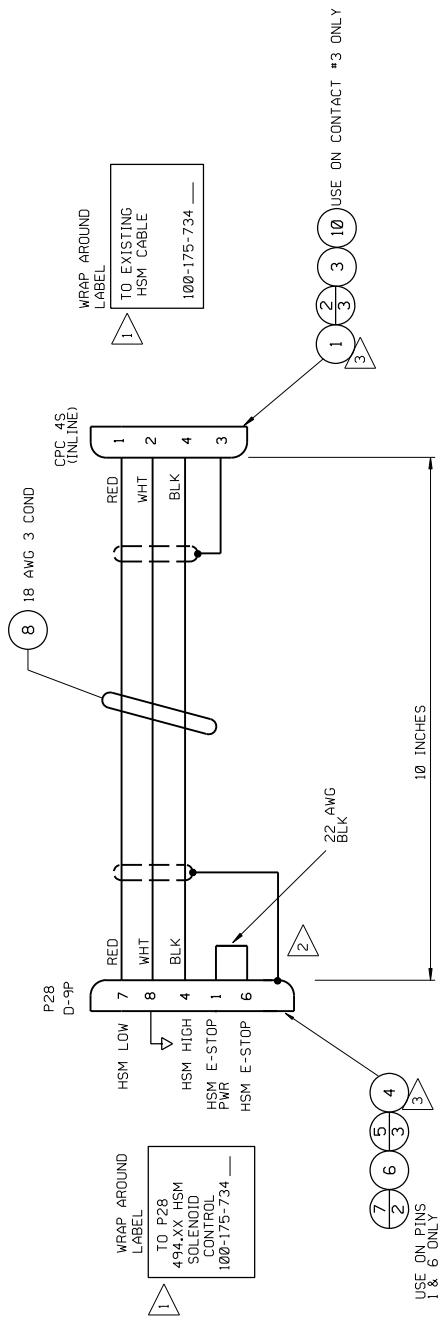


- NOTES:
- 1 LABEL INFORMATION TO INCLUDE PART NUMBER FOLLOWED BY CURRENT REVISION.
 - 2 CUT BACK OUTER FOIL SHIELD, FOLD DRAIN WIRE OVER THE GROMMET AND THEN ASSEMBLE THE CLAMP HALVES TOGETHER.
 - 3 ATTACH (ITEM 11) ROHS LABEL 6 INCHES FROM CONNECTOR.
 4. PARTS ON THIS PRINT ARE EU ROHS DIRECTIVE 2002/95/EC COMPLIANT.

[illegible][illegible]

> ATTACH (ITEM 11) ROHS LABEL 6 INCHES FROM CONNECTOR.
PARTS ON THIS PRINT ARE EU ROHS DIRECTIVE 2002/95/EC COMPLIANT.

3. 4.